

# QUICK TIPS

## CONSPIRACY™



Pay attention to your controller **MODE (Toggle/Momentary)** when assigning Pads or Switches (Buttons). Toggle MODE is ideal for playing sustained instrumentation as it will hold the sound until pressed once more. It is also ideal for turning On/Off functions such as EQ filters, Play/Rec transport button. The Pad/Switch LEDs will be lit until the control is pressed a second time.

In use, **Momentary MODE** can be thought of as a switch pedal. It is a quick on/off that is commonly used for transport STOP and would be ideal for playing/recording live drums and percussion samples or un-sustained musical notes. It is the mode you would choose to trigger loops in DAWs such as Ableton Live when the software's clip "Launch Mode" is set to "Toggle" the loop. The LED does NOT continue to be lit in this mode.